



# Quick Start Guide





# Contents

GuideReader Pod .....	05
What's In The Box? .....	05
Product Overview .....	06
Using Your GuideReader Pod .....	08
Connecting GuideReader Pod To Your Television .....	08
Turning Your GuideReader Pod On .....	10
Displaying GuideReader Pod On Your Television Screen .....	10
Turning Your GuideReader Pod Off .....	11
Return To Watching Television Programmes .....	11
Using The Dolphin Remote .....	12
Connecting To The Internet .....	14
Adding Additional Storage .....	14
Emergency Restart .....	15

## **Contents** *continued*

General Information .....	16
Important Safety Information .....	16
Licence And Warranty .....	18
Notice .....	18

## GuideReader Pod

This quick start guide will help you get to know your GuideReader Pod and explain how to get the most out of all of its great features.

## What's In The Box?

Please ensure the following items are present in the box. If an item is missing then please contact your supplier as soon as possible.

- GuideReader Pod
- Power supply DC 5V/3A
- HDMI cable (1 metre)
- Dolphin Remote
- 2 x AAA batteries (for Dolphin Remote)
- Quick start guide
- 32GB Micro SD card pre-inserted

# Product Overview



- 1 Power button
- 2 USB ports
- 3 Micro SD card slot  
(32GB Micro SD card  
pre-inserted)
- 4 Power port
- 5 Mini USB port
- 6 HDMI port
- 7 Ethernet port
- 8 3.5mm stereo  
headphone port



## Dolphin Remote

See page 12 for a  
detailed overview  
and user guide.

# Using Your GuideReader Pod

## Connecting GuideReader Pod to your television

Your GuideReader Pod comes with a cable to connect to your television set. This is called a HDMI cable, and it fits into the HDMI port **6** in the back of most TVs. For help finding the HDMI port on your TV, please refer to your TV user manual or ask a friend or family member.

To use the supplied cables, your GuideReader Pod needs to be within 1 metre of your TV and near to a wall socket. To connect GuideReader Pod to your TV:

1. Connect one end of the HDMI cable into the HDMI port **6** at the back of your GuideReader Pod



2. Connect the other end of the HDMI cable into an available HDMI port in the back of your TV



3. Connect the Power cable into the Power port **4** at the back of your GuideReader Pod



4. Connect the Power cable's plug into a wall socket and switch the power on.

Your GuideReader Pod is now ready to use.



## Turning your GuideReader Pod on

Press the Power button **1** on your GuideReader Pod. A blue light will appear on the Power button and GuideReader will start to load. GuideReader will take up to a minute to load.

## Displaying GuideReader on your television screen

Please ensure your GuideReader Pod is correctly connected to your television and switched on as outlined above. Please also ensure you have your TV remote control to hand as it will be required to display GuideReader on your TV screen.

To display GuideReader on your TV screen:

1. Turn your TV on. Your usual TV channels will be displayed.
2. Switch your TV output to HDMI. With most TVs, you can change the output using the 'AV', 'source' or 'input' button on your TV remote control.

For help, please refer to your television user manual or ask a friend or family member.

Once your TV output is set to HDMI, GuideReader will be displayed on your screen and GuideReader's voice will play through your TV speakers.

### **Turning your GuideReader Pod off**


Select 'Exit GuideReader' from the Main Menu and then choose 'Yes' to confirm. Your GuideReader Pod will shut down and power off.

### **Return to watching television programmes**

Use your TV remote control to switch your TV output to the output required for watching television programmes. With most TVs, you can change the output using the 'AV', 'source' or 'input' button on your TV remote control. For help, please refer to your television user manual or ask a friend or family member.

# Using The Dolphin Remote

The Dolphin Remote is a device you can use to control your GuideReader. This device requires 2x AAA batteries (included).

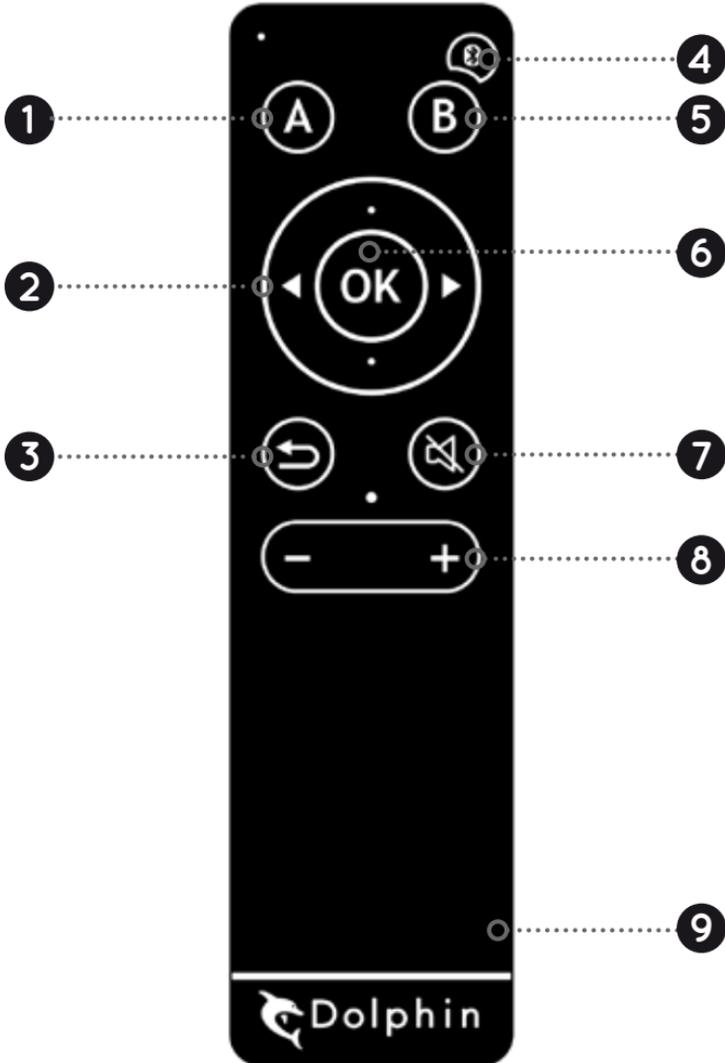

- 1 **Dashboard** - Open (and close) GuideReader's Dashboard. Hold whilst reading a book/newspaper to open a list of chapters/headings.
- 2 **Previous/Next** - Move to the previous/next item in a menu or line in a book.
- 3 **Back** - Move back to the previous menu. Hold to return to GuideReader's main menu.
- 4 **Bluetooth Pairing** - Pair the Dolphin Remote with your GuideReader Pod. NOTE: Your Remote has already been paired to your Pod and is ready to use.
- 5 **Help** - Open (and close) help when you are stuck.
- 6 **OK** - Select an item or start/stop reading in books, newspapers and magazines.
- 7 **Start/Stop Speech** - Press to start or stop the speech.
- 8 **Volume Up/Down** - Press to make the system volume louder/quieter. Hold to increase/decrease magnification.
- 9 **Battery Compartment** - Requires 2 x AAA batteries (included).

## Connecting To The Internet



You must connect your GuideReader to the Internet to be able to download books, newspapers and magazines from online libraries.

To connect to the Internet, from your GuideReader's Main Menu:

1. Select Settings.
2. Select Internet.
3. Select the Internet connection you want to use.
4. Select Connect.
5. If required, enter password.

## Adding Additional Storage



Your GuideReader Pod includes a Micro SD card, providing 32GB of storage for you to save your favorite titles. If you run out of storage space, you can simply replace the SD card **3** and save more titles. The maximum supported size for an SD card is 64GB.

## To install a new Micro SD memory card:

1. Locate the Micro SD card **3** slot on your GuideReader Pod.
2. Remove the old Micro SD card by pushing the card further into its slot using your fingernail. The Micro SD card will eject, allowing you to remove it safely.

## Emergency Restart



If your GuideReader screen becomes unresponsive, press and hold the Power/Sleep button **1** for 10 seconds until the screen turns off.

Leave your GuideReader for 15 seconds before turning it on again.



**IMPORTANT:** Avoid powering your GuideReader down by using the emergency restart where possible.

Always try to shut down your GuideReader using the correct shut down method to avoid loss or damage to data.

# General Information

## Important Safety Information

- Keep the product and all of its parts out of the reach of children.
- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- DO NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- DO NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- DO NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- Disconnect your Pod from the mains power supply during thunderstorms.

- Avoid any heavy impacts caused by collisions or dropping your Pod as this may damage the product.
- Only use the power supply that came with the product. Using an authorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- DO NOT store in dusty or dirty areas.
- DO NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a dry soft cloth or tissue paper to clean.
- DO NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorized handling of the device may damage it and will void your warranty.
- Keep the device away from magnets or magnetic fields.
- The underneath and sides of the product may become warm after a long period of use. This is normal.

## **Licence And Warranty**

Your GuideReader Pod comes complete with a full 12 month guarantee from the date of purchase. More information about your licence agreement and warranty is available at [www.YourDolphin.com/GuideReader](http://www.YourDolphin.com/GuideReader).

## **Notice**

Copyright© 2003 - 2017 Dolphin Computer Access Ltd. All Rights Reserved.

GuideReader is a trademark of Dolphin Computer Access Ltd.

All trademarks and registered trademarks mentioned in the Software and the Documentation are the property of their respective owners.



[YourDolphin.com](http://YourDolphin.com)

